Tanaka. Parts Catalog


Hedge Trimmer

Model: THT-240

DPL-HT240-HST 03-08-96

THT-240 OPTIONS AND ACCESSORIES

PERFECT MIX® 2-Cycle Engine Oil

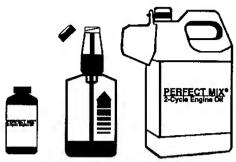

700109 2.8 oz. Bottle, 1 Gallon Size (24*) 700108 16 oz. Self-measuring Bottle (24*) 700110 1 Gallon Jug Commercial Size (6*) * Case Quantity

MANUALS & CATALOGS

044511A Owner's Manual DPL-HT240-HST Parts Catalog

SPECIAL TOOLS

 006-29326-000
 Flywheel Remover 001-29000-000
 Tachometer

 009-29323-500
 Piston Pin Remover
 070-2000W-500
 Pressure Tester

 037-29476-522
 Clutch Remover
 070-2000W-501
 Carb. Tool Kit






FIG. 1 ENGINE

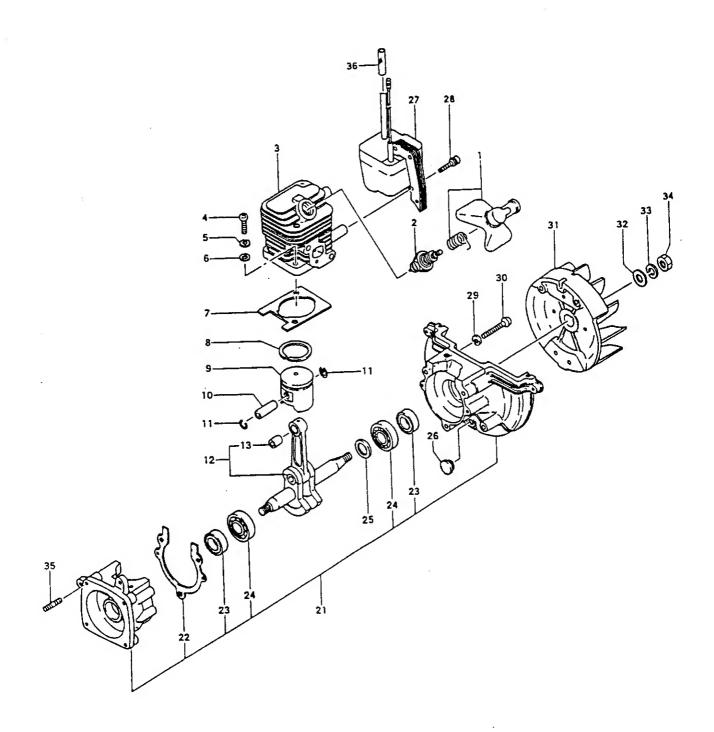

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	157-06500-91	CAP,SPARK PLUG ASS'Y	1		D		
2	018-11660-21	PLUG,SPARK	1		В		
3	002-06500-201	CYLINDER	1	li	С		*
4	990-11050-201	SCREW,MX20	2		D		
5	992-10050-012	WASHER,S,5	2		Α		
6	992-00050-011	WASHER,SMALL,5	2		С		
7	017-06500-200	GASKET,CYLINDER			В		
8	1	RING, PISTON	¦		A		
9	031-06500-200	PISTON	¦		В		
10		PIN, PISTON	¦		C		
11		CIRCLIP, PISTON PIN	2		A		
12	046-06500-801	CRANKSHAFT	1		Ô		
'-	040-00300-001	CHANKOHAFI	'		٦		
13	999-62081-225	BEARING,NEEDLE,F-810	1		С		
21	072-06500-90	CRANKCASE ASS'Y	1		D		Includes bearings, seals & gasket.
22	090-06500-200	GASKET,CRANKCASE	1		C		
23	999-66122-269	SEAL,OIL,#1227	2		D		
24	999-61600-100	BEARING,BALL,#6001	2		В		
25	330-00200-210	SHIM,12.2X19X.10	1		D		
							Shims are "as needed" to obtain
25	330-00200-220	SHIM,12.2X19X.15	1		D		correct c/s side clearance.
25	330-00200-230	SHIM,12.2X19X.20	1		D		
25	330-00200-240	SHIM,12.2X19X.30	1		D		
26	599-00601-200	CUSHION	1		D		
27	167-21523-800	COIL,IGNITION	1		C		
28	994-16040-226	SCREW,WS,4X22	2		D		
29	992-10050-012	WASHED S 5			ا		
	990-11050-301	WASHER,S,5 SCREW,5X30	3		\triangle		
		ROTOR,MAGNETO	J 1				
		WASHER,8			A		
1	992-10080-012	WASHER,S,8	,		B		
30	10000-012	TTAUTIER, 0,0	'		اد		
34	991-01080-011	NUT,8	1		в		
35	100-02100-200	BOLT,STUD,6X22	2		c		
36	250-06500-200	TUBE,INSULATOR	1		D		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.2 ENGINE COMPONENTS

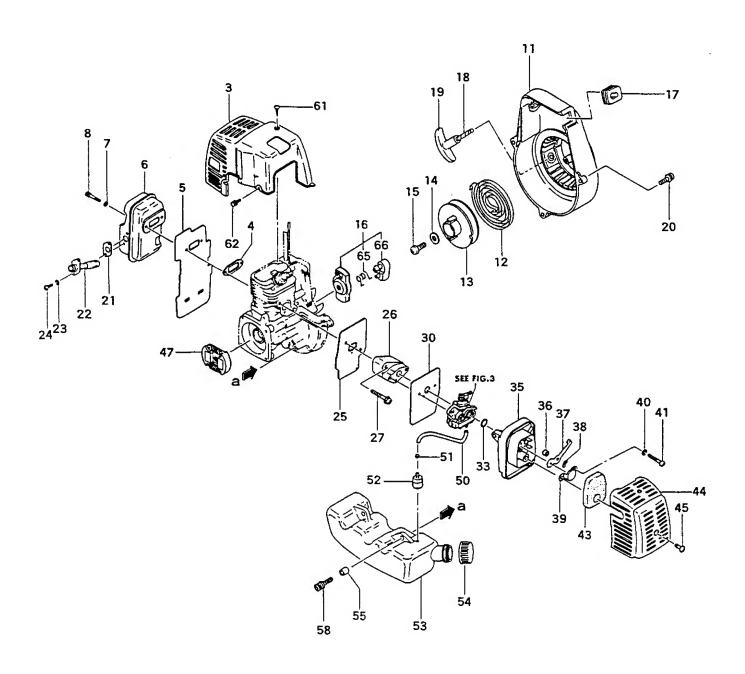

REF.	PART NO.	PART DESCRIPTION	Q	С	s	SERIAL NO	REMARKS
3	738-06500-20	PROTECTOR, MUFFLER	1		С		
4	737-06500-200	GASKET,MUFFLER	1		С		
1 1	133-06500-200		1		С		
	706-06500-800		1		D		
1		WASHER,5	2		A		
1 1	990-51050-503		2		c		
	000 01000 000	DOET, TEX, SXOO	-				
11	112-06500-80	CASE,FAN	1		С		
12	780-06097-200	SPRING,RECOIL	1		A		
i i		PULLEY, STARTER	1		В		
1		WASHER,ROPE REEL	1		С		
		SCREW,SET	1		D		
		PULLEY,STARTER,ASS'Y	1		С		
17	203-0604A-202	GROMMET	1		С		
18	783-06097-200	ROPE,STARTER	1		c		
19	785-06410-200	HANDLE,STARTER	1		С		
1 1		SCREW,PS,4X16	3		С		
l I		GASKET,MUFFLER	1		С		
1 1		PIPE,TAIL	1		С		
		- · · · -, · · · · -					
23	992-10040-012	WASHER,S,4	2		В		
		SCREW,4X8	2		c		
1 1		GASKET,INTAKE	1		В		
26		INSULATOR, CARBURETOR	1		С		
4 1		SCREW,5X25WS	2		D		
1 1	402-06500-200	GASKET,CARBURETOR	1		В		
33	999-67015-000	O-RING,P15	1		c		
35	423-06500-80	BODY,CLEANER	1	ŀ	cl		
36	470-06500-200		2		Ы		
l I	528-06500-200		1		D		
		WASHER,8	1		cl		
1 1		BOARD,BLOW OVER CHECK			D		
				İ	-		
40	992-10050-012	WASHER,S,5	2		Α		
	990-11050-602		2		С		
, ,		ELEMENT,CLEANER	1		A		
l 1		COVER,CLEANER	1		С		
1 1	380-0637C-200		1		В		
l I	277-0635M-800		1		В		
50	223-06500-90	PIPE,FUEL,ASS'Y	1		С		See PI-3069 .
51	680-00731-201	CLIP	1		В		
52	675-0641E-900	FILTER,FUEL	1		Α		
					- 1		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIGURE 2 cont.

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
53	591-06500-20	TANK,FUEL	1		С		
54	595-0650A - 90	CAP,TANK	1		Α		
55	659-00801-200	COLLAR, TANK HOLDING METAL	2		С		
58	994-63050-185	BOLT,HEX 5X18PS	2		D		
61	990-72045-164	SCREW,TAPPING,4.5X16	1		С		
62	994-25040-128	BOLT,PS,4X12	2		С		
65	790-06097-200	SPRING,STARTER PAWL	1		С		
66	788-06500-20	PAWL,STARTER	1		С		

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.3 CARBURETOR


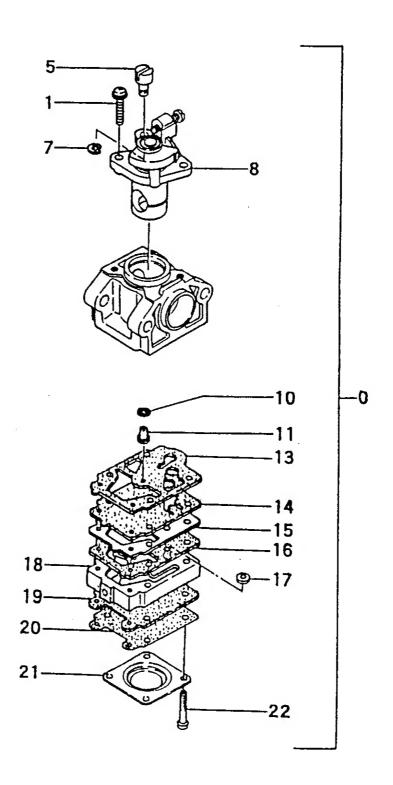


FIGURE 3

	TITI-240 FANTS LISTING										
REF.	PART NO.	PART DESCRIPTION	Q	C	s	SERIAL NO	REMARKS				
0	455-25145-900	CARBURETOR, ASS'Y	1		С	~R222951					
0	455-25182-90	CARBURETOR, ASS'Y	1	ĺ	С	R222952~					
1	548-25140-200	SCREW,THROTTLE SET	2		D						
5	539-25120-200	SWIVEL	1	1	D	{					
7	489-25100-200	RING,STOP	1		D						
08	488-25145-800	VALVE,THROTTLE	1		D						
1											
10	~~~	*O-RING	1								
11	599-2000W-410	JET,MAIN,#41	1		D		* Contained in Carb Repair Kit				
13	~~~	*GASKET,PUMP	1				650-25140-900				
14	~~~	*DIAPHRAGM,PUMP	1		li		(Not availiable individually)				
15	523-25100-201	PLATE,PUMP	1		c		,				
16	522-25100-200	PLATE,CIRCUIT	1		c						
17	~~~	*SCREEN,INLET	1								
18	575-25140-800	BODY,PUMP	1		D	~R222951					
18	575-25182-80	BODY,PUMP	1		C	R222952~					
19	~~~	*GASKET,DIAPHRAGM	1								
20	~~~	*DIAPHRAGM,METERING	1	ľ	ŀ						
	476-25004-200	COVER,DIAPHRAGM	1		D						
22	548-25101-200	SCREW,SET	4		D						

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.4 GEAR CASE & CUTTER

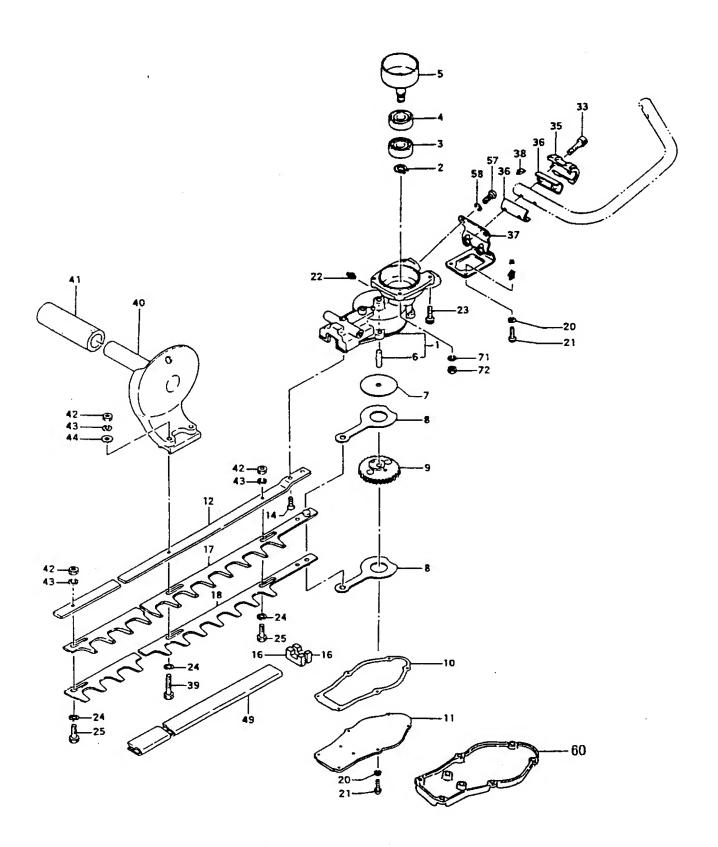

	THI-240 PARTS LISTING										
RE		PART DESCRIPTION	C	C	S	SERIAL N	O REMARKS				
1	300-3318B-80	CASE,GEAR	1		D						
2		RING,STOP,C-15 EX	1	1	C						
3	999-61600-200	BEARING,BALL,#6002	1		В						
4	999-61600-202	BEARING,BALL,#6002Z	1	1	C						
5	288-33180-80	DRUM,CLUTCH	1		D						
6	305-33160-200		1		D	Ī					
1			Ι,			l					
7	075-33160-200	PLATE.GUIDE	1		D						
8	101-33160-22	ROD,CAM	2	1	c						
9	307-33180-20	GEAR,2	1		D						
10	303-33160-200	• • • • • • • • • • • • • • • • • • •			В		1				
11	630-33160-200	,			1 1						
12		GUIDE, CUTTER, THT-240	1.								
'-	122 00 100-20	GOIDE, COTTER, THT-240	1		D						
14	990-52060 165	DOLT LIEV AVA A			$\lfloor \rfloor$						
16	085-33160-200	BOLT,HEX,6X16	2		В		1				
1			2		В						
17	CB24B	BLADE,CUTTER,THT-240	1		D						
18	CB24A	BLADE, CUTTER, THT-240	1		D		1				
20		WASHER,SPRING 4	8		Α						
21	990-51040-103	BOLT,HEX.HOLE,4X10	8		Α						
		1	li	- 1	ĺ						
22		NIPPLE,GREASE	[1]	- 1	D						
23	990-51060-143	BOLT,HEX,6X14	2		D						
24	129-33202-201	WASHER,7	5	ĺ	Α						
25	124-33202-206	BOLT,BLADE,A	4	- 1	A						
33	990-51050-353	BOLT,HEX.HOLE,5X35	2	J	cl						
35	057-33234-20	HOLDER,HANDLE	11		Ы						
			11	1	1						
36	060-33250-201	DAMPER,RUBBER	2		Ы		1				
37	058-33180-80	BRACKET,HANDLE	11		D						
38	176-0062W-201	TERMINAL, GROUNDING	11		c						
39	125-33202-205	BOLT, CUTTER FIXING B			B						
40		HANDLE,B			c		ļ				
41					c						
			11	- [٦		ł l				
42	123-33202-200	NUT, CUTTER FIXING	5								
	992-10060-012		1 1		A						
		WASHER,6	5	- 1	A						
		COVER,CUTTER,30"			A		ļ				
		SCREW,5X12		- 1							
	992-10050-062		2	- 1	A						
50	10000-002	vvaonem,5,5	2	1							
60	301-33160-00	CEAR CACE COVER SEE									
		GEAR CASE COVER SET				1240001~	Will fit all THT-240 units				
		WASHER,S,6	2	1							
72	991-01060-011	NUT,6	2		A						
]				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part


FIG.5 HANDLE

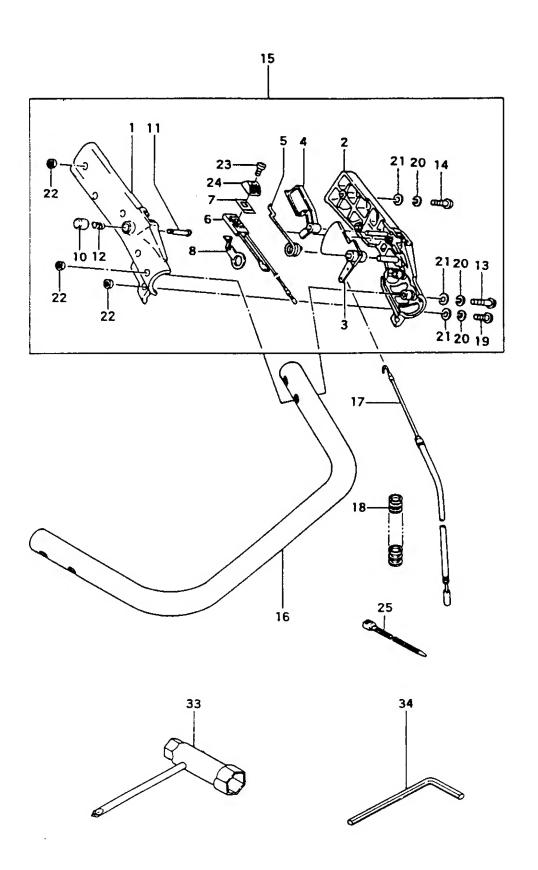

	T .		_		, ,		
REF.		PART DESCRIPTION	Q	С	S	SERIAL NO.	REMARKS
1	053-33231-220	GRIP,HANDLE A	1		D		
2	054-33231-222	GRIP,HANDLE B	1		D		
3	230-33210-201	LEVER,THROTTLE	1		D		
4	231-33210-200	LEVER,SAFETY	1		D		
5	061-32600-201	SPRING,THROTTLE LEVER	1		D		
6	170-33180-80	SWITCH,STOP	1		D		
7	925-32530-200	DECAL,STOP BUTTON	1		C		
8	319-37900-201	TERMINAL, GROUNDING	1		D		
10	725-32600-202	CAP,PUSH PIN	1		C		
11	064-33225-200	PIN,PUSH	1		D		
12	066-32300-201	SPRING,STOPPER	1		D		
13	990-11040-301	SCREW,4X30	2		D		
V							
14	990-11040-251	SCREW,4X25	1		C		
15	055-33180-90	GRIP,HANDLE ASS'Y	1		D		
16	050-33180-80	HANDLE,A	1		D		
17	885-0650J-80	WIRE,THROTTLE	1		D		
18	164-10014-400	TUBE,PROTECTION	1		D		
19	990-11040-141	SCREW,4X14	3		В		
				i			
20	992-10040-012	WASHER,S,4	6		В		
21	992-00040-011	WASHER,4	6		В		
22	991-78040-010	NUT,LOCK 4	6		С		
23	990-11030-101	SCREW,3X10	1		В		
24	258-11650-20	BUTTON,STOP	1		С		
25	198-33130-200	CLAMP,CORD	1		D		
33	036-29331-501	SPANNER,COMBI	1		D		
34	813-20000-200	WRENCH,HEX,4	1		D		
			Ιl				

^{*} Indicates the part is included in a kit or assembly and is not available individually. Q=Quan. used C=Interchangeability S=Stocking code: A-Fast moving B=Med. fast C=Med. move D=Slow move E=N.L.A. F=Superceded or replaced by a new part

FIG.6 MARKS

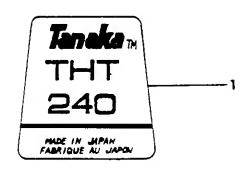





Tanaka. PROFORCE.

FIGURE 6

REF.	PART NO.	PART DESCRIPTION	Q	С	S	SERIAL NO	REMARKS
1	906-0650N-20	DECAL,THT-240	1		D		
2	911-06500-200	DECAL,SRS	1		D		
3	950-37900-200	DECAL,PRO-FORCE A	1		С		
4	951-37900-200	DECAL,PRO-FORCE	1		D		
						-	